Digital ISE Sensor Series



Review

Easy to connect to PLC,DCS, industrial control computers, general purpose controllers, paperless recording instruments or touch screens and other third party devices.

The CS6714AD ammonium ion selective electrode is an effective method to measure the ammonium ion content in the sample. Ammonium ion selective electrodes are also often used in online instruments, such as industrial online ammonium ion content monitoring. Ammonium ion selective electrode has the advantages of simple measurement, fast and accurate response. It can be used with PH meter, ion meter and online ammonium ion analyzer, and also used in electrolyte analyzer, and ion selective electrode detector of flow injection analyzer.

Features

large sensitive area fast

PP material,

response, stable signal

Work well at 0~50°C

The lead is made of pure copper, which can directly realize remote transmission, which is more accurate and stable than the lead signal of copper-zinc alloy.


Wiring

4~20mA output:

- ① Black V-, ② Transparent line V+, Power supply
- 3 Green I+, 4 White I-, Current
- (5) Red A , (6) Black B, Communication

RS485 output:


- ① Blue V+, ②Yellow V-, Power supply
- ③ Red RS485A, ④ Green RS485B,

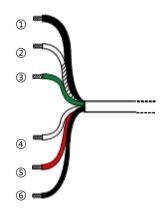





Installation

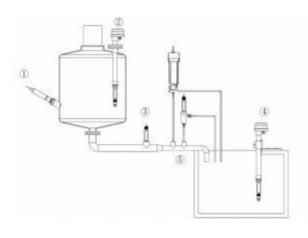

(Common electrode installation)



Technicals

Parameter	CS6714AD
Measured Range	0~1000mg/L(Customizable)
Principle	lon selective sensor
Temp Range	0-50°C
Output Signal	RS485 or 4-20mA
Pressure Range	0—0.1MPa
Temperature Sensor	NTC10K
Housing Materials	PP+PVC
Membrane Resistance	< 500MΩ
Calibration	Standard liquid calibration
Accuracy	±2.5%
Resolution	0.1mg/L
Connection method	4 or 6 core cable
Threaded connection	NPT3/4"
Cable Length	10 m or Customize
Pin, BNC or Customize	